LA GARD MECHANICAL 3-WHEEL COMBINATION LOCK INSTRUCTIONS

OPENING WITH THE FACTORY SET COMBINATION ON 50.

- 1. Using the <u>OPENING INDEX</u> turn the dial to the <u>LEFT</u> and pass 50 **three** times and stop exactly on 50 the **fourth** time.
- 2. Turn the dial <u>RIGHT</u> until it stops. The combination lock bolt will retract and the vault may be opened.
- 3. Rotate the 3-Spoke door handle clockwise into the "Open" position and pull door open.

Note: For help visit http://www.youtube.com/watch?v=h8YNx83h63g

OPENING WITH A PREVIOUSLY SET COMBINATION (Example: 10-20-30)

- 1. Turn the dial to the <u>LEFT</u> four complete times to clear the lock to accept the combination.
- 2. Using the <u>OPENING INDEX</u>, turn the dial <u>LEFT</u> and pass the first number of the combination, 10, **three** times and stop exactly on 10 the **fourth** time.
- 3. Turn the dial to the <u>RIGHT</u> and pass the second number, 20, **two** times; and stop exactly on 20 the **third** time.
- 4. Turn the dial to the <u>LEFT</u> and pass the third number, 30, **once**; and stop exactly on 30 the **second** time.
- 4. Turn the dial <u>RIGHT</u> until it stops. The combination lock bolt will retract and the vault may be opened.
- 5. Rotate the 3-Spoke door handle clockwise into the "Open" position and pull door open.
- 6. To relock, turn the dial to the LEFT four complete turns.

Note: For help visit http://www.youtube.com/watch?v=ulNKpu7wwfs

CHANGING THE COMBINATION (Example: from 10-20-30 to 60-70-80)

- 1. To change the combination, you will need access to the existing combination and a La Gard Group 2 Change Key.
- 2. Turn the dial to the <u>LEFT</u> four complete times to clear the lock to accept the combination.
- 3. To change the combination, you must first open the vault door by dialing the existing combination (example: 10-20-30). Make sure the bolt is fully retracted (lock open).
- 4. Open the vault door, remove the small screw in the lower right corner and slide out the inside door panel to access the Change Key keyhole in the combination lock.
- 5. Before changing the combination, verify that the dial stops between 90 and 100 on the OPENING INDEX.
- 6. Next, redial the existing combination, 10-20-30, on the <u>CHANGING INDEX</u>, stopping the dial on 30 (the last number of the combination).
- 7. In the back of the door, insert the Change Key into the keyhole. If the Change Key will not go in, the wheels are not lined-up to be changed, and you must redial the combination on the CHANGING INDEX.
- 8. Turn the Change Key to the <u>RIGHT</u> until it stops (approximately ¼ turn). Leave the key in the lock. Select a new combination (example: 60-70-80). <u>Never</u> select a number from 0-20 as the last number of the combination.
- 9. Using the <u>CHANGING INDEX</u>, turn the dial to the <u>LEFT</u> and pass 60 **three** times and stop exactly on 60 the **fourth** time.
- 10. Turn the dial to the RIGHT and pass 70 two times and stop exactly on 70 the third time.
- 11. Turn the dial to the <u>LEFT</u> and pass 80 **once** and stop exactly on 80 the **second** time. **Leave the dial at 80.**
- 12. Turn the Change Key to the LEFT until it stops and remove key.
- 13. Dial the new combination, 60-70-80, on the <u>OPENING INDEX</u> several times to make sure the combination lock will open before you lock the vault door.

Notes:

- After changing combinations, always dial the new combination and retract the locking bolt several times before shutting and locking the vault door.
- For help visit http://www.youtube.com/watch?v=N9RdcTqHI-w



